



















## 3m PVC Partytent Instruction

Part no.			3x4m	3x6m	3x8m	3x10m
1	Frame pole		6	8	10	12
2	Frame pole		6	9	12	15
4	Leg		6	8	10	12
6	3-way Connector		4	4	4	4
7	4-way Connector		2	4	6	8
8	3-way Connector		2	2	2	2
9	4-way Connector		1	2	3	4
	Middle peg		6	8	10	12
	Small peg		26	32	38	44
	Spiral peg		4	4	4	4
	Bungeeball long		66	84	102	120
	Bungeeball short		14	14	14	14
	Rope		4	4	4	4
	Screw		30	42	54	66
	Roof		1	1	1	1
	Sidewall		4	6	8	10
	Endwall		2	2	2	2

# I

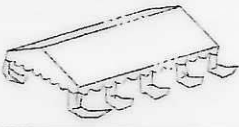
Select a flat ground for the tent, unpack the carton and check all the parts including tubes, tent and accessories... etc are present as same as list.

Assemble the framework of rooftop by joining the portion (6,7,8,9) together with poles (1,2). To ensure the screw fixed to every pole tightly .

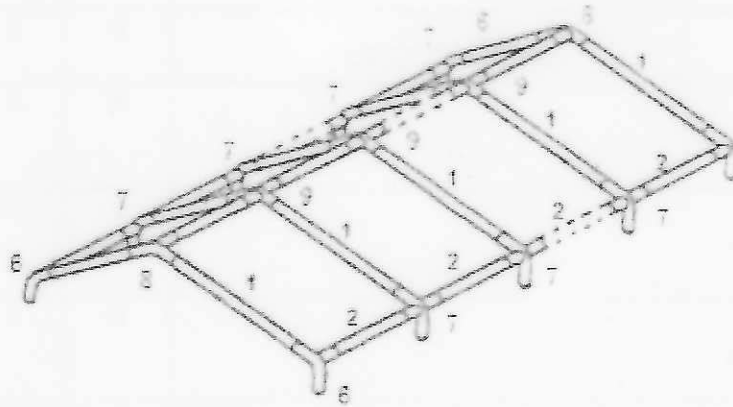


# II

Attach one end of supported pole (4) to the joints (6,7)

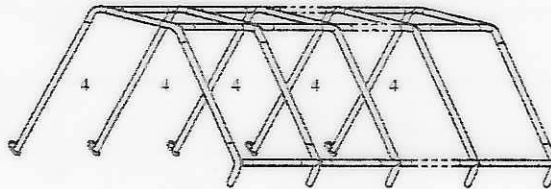

# III


Cover the roof on the frame ,and attach it by the bungee balls properly ,take care of the tension of the bungee balls ,for if you use too many on one side of tent ,it may too tight to tie the other side of it .

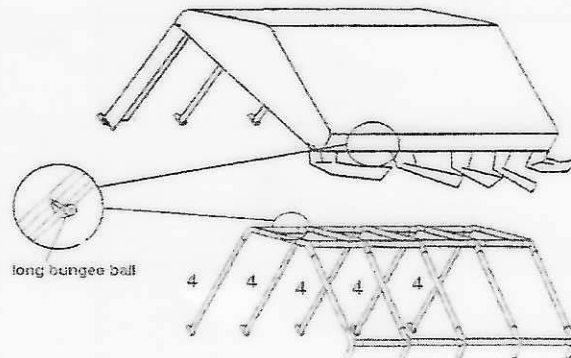

# IV


Attach the another supported poles (4) to the joints (6,7) , built-up the framework ,use the long peg to fix each pole

into the ground and use the hook to fix the leg cover to the leg .

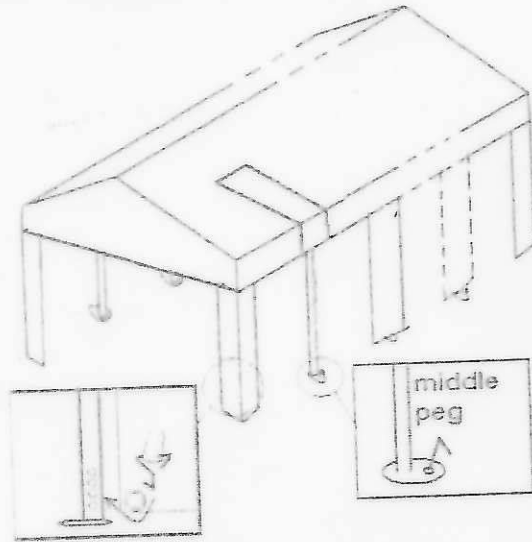

V

spread the wall panel and door panel attach to framework by using the bungee cords clasping the frame to grommets that is construct over the wall panel and door panel to ensure stability. Also use the short pegs to fix the doors to the ground .

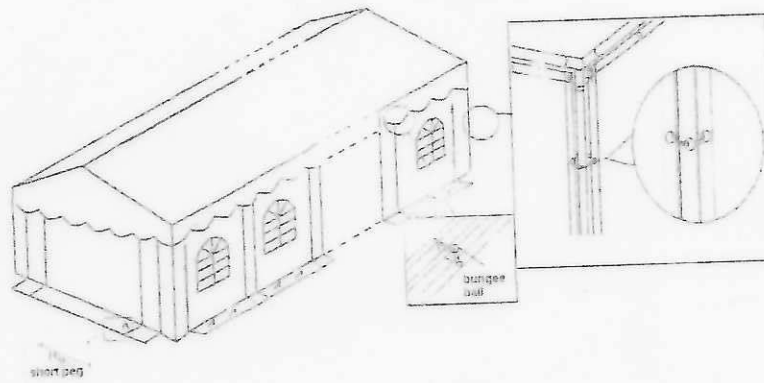

VI

The Guy lines clasp to each corner of tent and another end of line fix to ground by pegs.

